



Sandstone Tile



Sandstone Tile

Defined by natural warmth and texture, Sandstone tiles bring an organic connection to the landscape. Their soft golden, beige, and silver tones create inviting surfaces with timeless character. Durable and naturally slip-resistant, Sandstone tiles enhance courtyards, pathways, and interiors alike. A versatile choice that balances earthy authenticity with refined architectural appeal.




Sandstone Tile

Tiles:

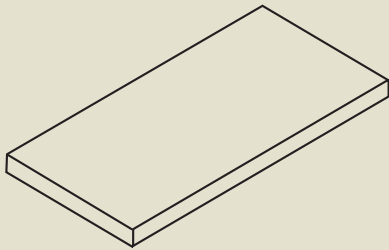
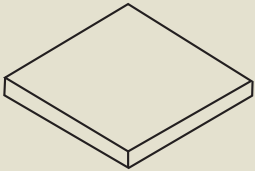


Cobblestones:

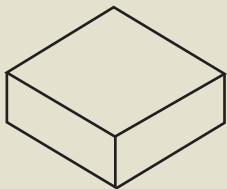

For more downloadables visit our website.

Sandstone Tile

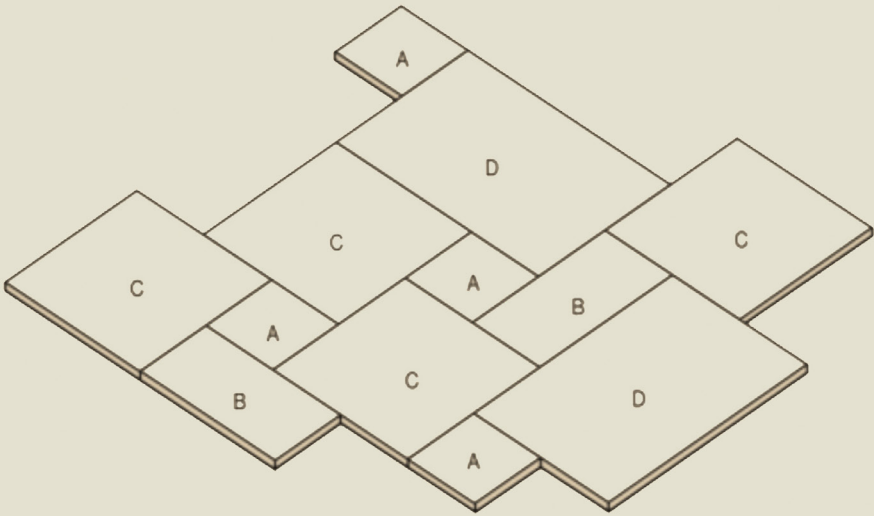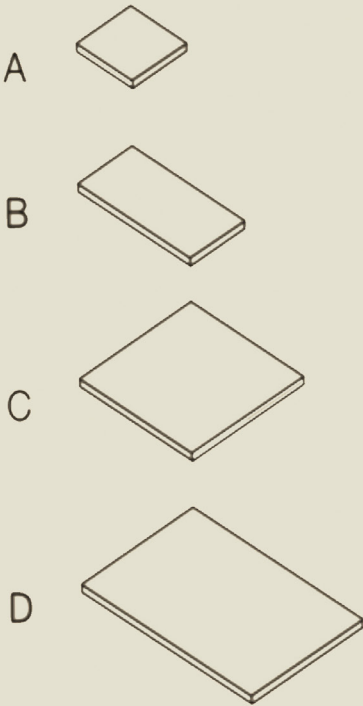

Bullnose



Bevelled




Dropface
(Mitre Cut&Glue)




Corner Dropface
One long and one short edge



Double Dropface
Two long edges



Triple Dropface
Two long and one short edges

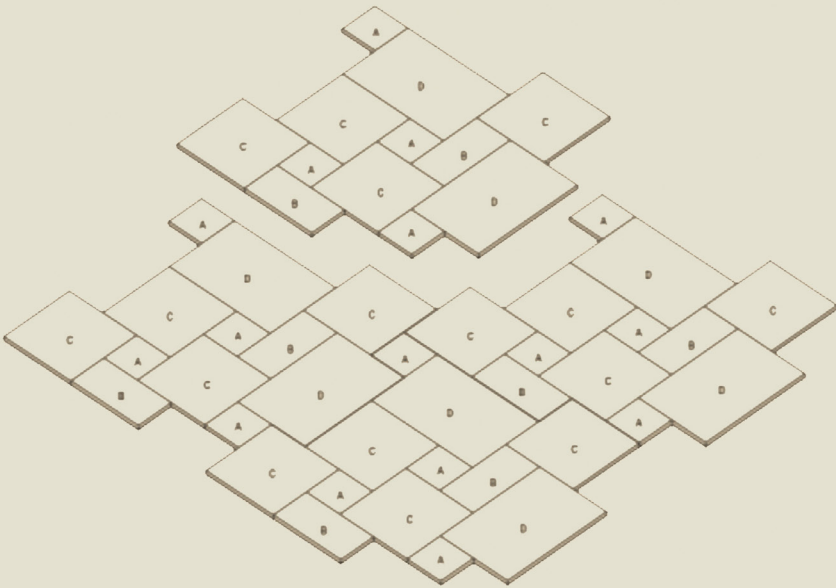

French Pattern

For more downloadables visit our website.

Sandstone Tile

Stone type and finish

Available tile sizes

Capella Sole

Natural Split, Honed

18-25 mm Crazy
Jumbo French pattern, Hammered edge 22mm thick
800 x 600 x 30mm Large organic stepper
600 x 500 x 30mm Standard organic stepper
300 x 300 x 12mm
400 x 400 x 15mm
500 x 500 x 15mm
600 x 300 x 15mm
600 x 400 x 15mm
600 x 600 x 15mm
400 x 400 x 30mm
500 x 500 x 30mm
600 x 400 x 30mm
600 x 600 x 30mm
800 x 400 x 30mm
600 x 300 x 30mm
600 x 400 x 30mm
400 x 400 x 15mm Honed
500 x 500 x 15mm Honed
600 x 300 x 15mm Honed
600 x 400 x 15mm Honed
600 x 600 x 15mm Honed
600 x 300 x 20 / 50mm Dropface natural split
600 x 400 x 20 / 50mm Dropface natural split
600 x 300 x 20mm Dropface honed
600 x 400 x 20 / 50mm Dropface honed

Capella Alba

Honed

400 x 400 x 15mm
500 x 500 x 15mm
600 x 600 x 15mm
600 x 300 x 15mm
600 x 400 x 15mm
600 x 300 x 30mm
600 x 400 x 30mm
600 x 300 x 20 / 50mm Dropface
600 x 400 x 20 / 50mm Sawn edge calibrated dropface
600 x 300 x 30mm Pencil edge calibrated
600 x 400 x 30mm Pencil edge calibrated

Sandstone Tile

Stone type and finish

Available tile sizes

Capella Fumé

Natural Split

18-25 mm Crazy
18-25 mm thick French
800 x 600 x 30mm Large organic step
600 x 500 x 30mm Standard step
600 x 400 x 22mm Tile
600 x 300 x 30mm Sawn edge calibrated bullnose
600 x 400 x 30mm Sawn edge bullnose
600 x 400 x 30mm Pencil bullnose
600 x 400 x 20/50mm Sawn edge calibrated dropface

Capella Dorata

Natural Split

18-25 mm thick Crazy
300 x 300 x 15mm
400 x 400 x 15mm
500 x 500 x 15mm
600 x 300 x 15mm
600 x 400 x 15mm
600 x 600 x 15mm
400 x 400 x 30mm
500 x 500 x 30mm
600 x 400 x 30mm
600 x 300 x 30mm Bullnose coper
600 x 400 x 30mm Bullnose coper
600 x 300 x 20/50mm Dropface coper
600 x 400 x 30/50mm Dropface coper

Capella Bosco

Natural Split

400 x 400 x 15mm
500 x 500 x 15mm
600 x 300 x 15mm
600 x 600 x 15mm
600 x 300 x 30mm Bullnose
600 x 400 x 30mm Bullnose

Installation Guidelines

Natural stone

These guidelines are general advice only and should be used with relevant Australian standards. They do not replace professional installation services.

Before installation

- Natural stone tiles may arrive slightly damp or with residue. Wash and let them dry fully slight lightening is normal and reveals natural tones.

- Lay tiles out to view markings and mix from all crates for even colour and pattern.

Minor edge chipping is normal and suitable for cuts.

- Grade tiles by thickness install thicker ones first and bed thinner ones with adhesive for a level finish. Size and thickness variations are part of the stone's character.

- Ensure tiles are clean, dry, and free of dust before laying. Confirm your installer is familiar with the product.

Please note:

Every piece of natural stone is unique. Variations in colour, texture, and surface finish including minor chipping are inherent and add to its individuality. Any tiles with excessive damage or irregularity should be set aside and reviewed before installation, as once installed they may not be covered by warranty.

Adhesion

For a lasting installation, all stone tiles must be solidly bedded with 100% adhesive coverage. During installation, tiles should be lifted occasionally to confirm full compaction and adhesion have been achieved.

We recommend using Mapei or Laticrete products for the installation process both are well-established brands with proven performance:

[Laticrete Australia](#)

[Mapei Australia](#)

Fast-setting adhesives are often preferable, as they help minimise issues caused by moisture retention in certain stones. Some materials may require specialised adhesives to ensure a secure bond always check with the adhesive manufacturer for product-specific guidance suited to your stone type.

For light-coloured stones, use white adhesives to prevent any potential discolouration within the body of the stone. Where substrates are flexible such as timber floors use flexible adhesives and ensure the substrate is properly prepared.

For uncalibrated stone tiles, choose a large-format floor adhesive to accommodate variations in tile thickness. This will help achieve a level surface, especially when installing a mix of sizes within the same area.

Grouts

Grout plays an important role in maintaining your stone installation. It helps keep tiles securely in place, creates a watertight seal to reduce moisture penetration, and allows for natural expansion and contraction.

Always use a high-quality grout that suits both the stone type and the intended application.

Reliable grouting options include:

[Laticrete Australia](#)

[Mapei Australia](#)

For best results, consult a professional when selecting grout to ensure the right colour, suitability, and durability for your project.